

## #1281: SimLab – Move Tool

**Product:** SimLab

**Product Version:** SimLab 2017.2 or above

### Topic Objective

Move tool in SimLab.


### Topic Details

#### Move Tool

This tool is used to translate and rotate selected entities. When enabled, it will be positioned at the centre of the selected entities.


Click and drag the graphic manipulators to move entities in the selected direction or enter a value in the micro dialog and press Enter on the keyboard. We can also select a manipulator to restrict translation or rotation to the selected plane or direction. Select the tool centre to translate in 3D.

#### Example

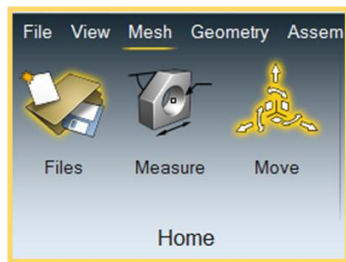

Input

Output

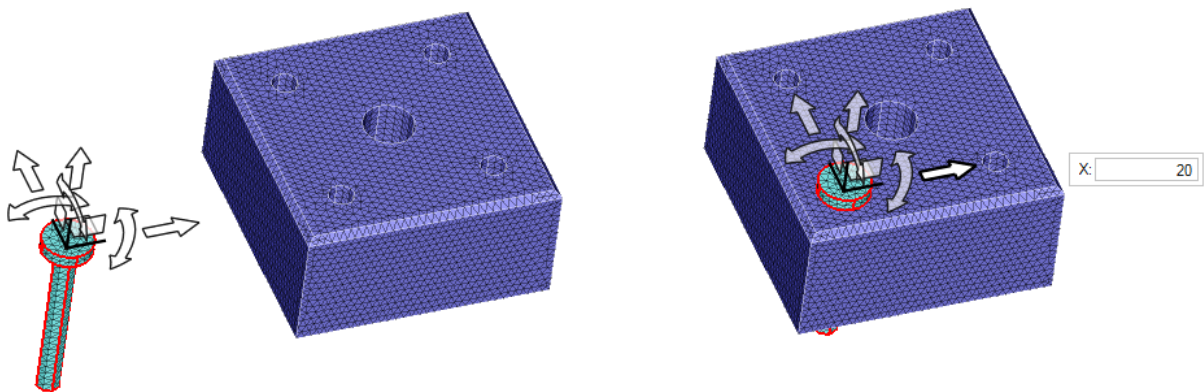

**Note:** It is supported only for body input and it will be positioned at the origin when none of the entities are selected.